

# WAX FREE TOILET SEAL

## THE CLEAN AND EASY WAY TO INSTALL A TOILET

- Seals on raised floors, wood, tile, linoleum & carpet
- No need for flange risers or stacked wax rings
- Ideal for in-floor radiant heat installations
- No more guessing if there is a positive seal.


**Impervious to mold and mildew!**



**Install WAX FREE Toilet Seal on CLEAN Toilet Horn FIRST!**

**NOTE:** If installing on an existing toilet, remove ALL old wax and residue with a household cleaner and DRY COMPLETELY.


PART #	DESCRIPTION
FTS-3	Connects toilet to 3" drain pipe
FTS-4	Connects toilet to 4" drain pipe
FTS-4CF	Connects toilet to 4" drain pipe on a 4x3 combination flange

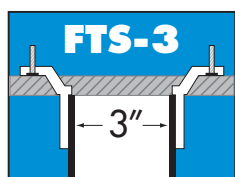

3" Toilet Flange with 3" Drain Pipe



4" Toilet Flange with 4" Drain Pipe

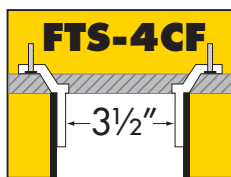

4x3 Combination Flange with 4" Drain Pipe

**1)** Remove paper seal from adhesive and firmly press the Fernco WAX FREE Toilet Seal over the horn on the toilet.

**2)** Align the Fernco WAX FREE Toilet Seal with the floor drain and the flange bolts and lower into desired position. To ease installation, lubricate the flexible ribs with soapy water.



**FTS-4 Is Ideal for 4" Closet Wall Carriers**

www.fernco.com



Fernco, Inc. • Davison, MI  
1-800-521-1283 • FAX: 810-653-8714

Fernco Connectors, LTD • Sarnia, Ontario  
1-800-265-7518 • FAX: 519-332-8610

Fernco, Inc. West • Sparks, NV  
1-800-232-3092 • FAX: 775-358-3547